



Quick start guide

Start here

www.noa-mobile.eu

 
Phone overview

Getting started


Please make sure the phone is powered off before proceeding

SIM and memory card installing


1




2

 


3

 


4

 

5

 

Buttons

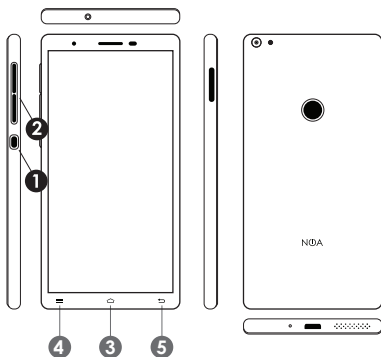 

1 Power key

To power off the device, press and hold the power key for a few seconds, then tap the option to confirm. When the device is on, press the power key to once to activate or deactivate the screen. Press the key to end the call.

2 Volume key

You can increase the volume by pressing the volume key on the side of the device.

Home key ()

Touch the key to return to the home screen. In the idle screen, touch and hold the key to return to the home screen. In the idle screen, touch and hold the key to view recently accessed features.

Menu key ()

In standby mode, touch the key to set the wallpaper, view settings, manage apps and view notifications. Touch it to view menu options.

Back key ()

Touch to go back to the previous menu.

Charging

Insert the micro-USB end of the supplied charger into the I/O port on the phone, and the other end into the charger, or the USB port of your computer.

Before you use the phone for the first time, you must charge the battery fully for at least 5 hours.

Let the battery drain completely for the first time, after that you can charge it until the battery icon stops blinking.

Home screen

Slide your finger to the right of the Lock interface to access the Home screen.



Customize your home screen by touching and holding an empty area to set wallpapers. Press and hold an icon to move or remove it from the home screen.

 
 
The preset icons on the home screen are the following:



Make a Call

You can make a call through the Call Interface, which also contains the call log, the contact list, your favorites and your messages (which also contain your number list).

In standby mode, press the call key to make a call.

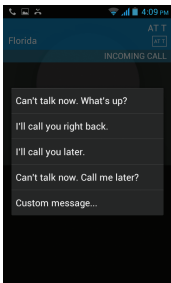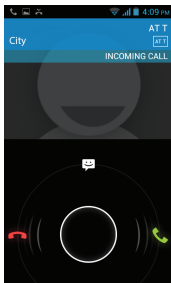

Some content may differ from your device depending on the region, service provider or software version, and it is subject to change without notice.

 


Messaging

You can send text and multimedia messages to any contacts that have an SMS or an MMS capable device.

Send a message by tapping the messaging icon to launch the application.

Launch the messaging center app to check your unread SMS/MMS messages.

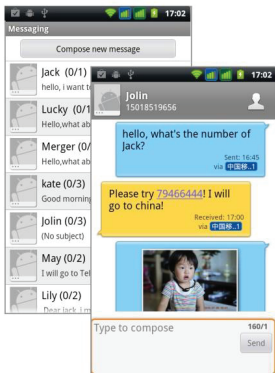


Internet access

Once you have successfully connected to the WiFi/3G/WCDMA network, tap the browser icon on the app screen or on the home screen to launch the application.

Camera


The phone is equipped with frontal and rear cameras that also act as camcorders, which can be used to share wonderful moments with your friends and family.

 Adjust the focus, exposure, zoom in or zoom out, and switch between the functions of camera and video recorder by tapping the app icons.

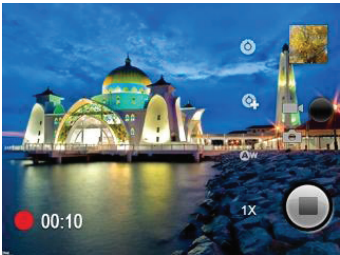


Photos

 Enjoy the ease of photo browsing by flicking left and right to navigate the images. Double tap or pinch the photo to zoom. You can also edit, print share them, and much more.

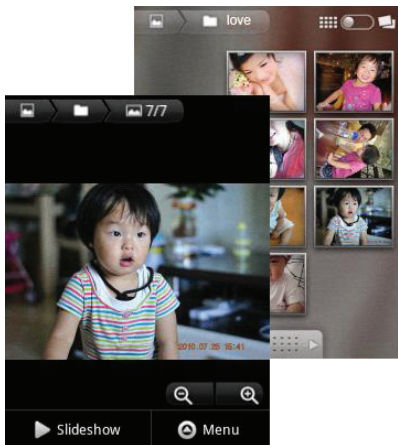

Maps

 You can view satellite images or street maps with detailed route instructions while you are walking in the street. The map app can be used to locate yourself and view real time traffic conditions or public transit.

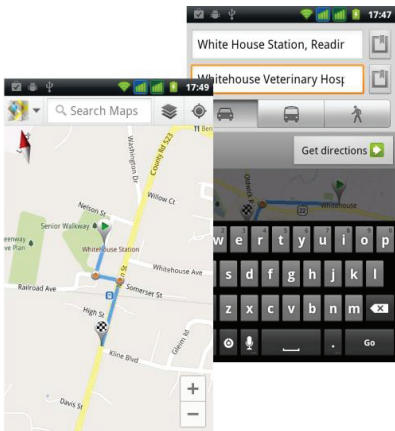

Other cool features

Security settings

You can lock your phone for security purposes by selecting.

Setting > Security > Screen lock

None: the screen lock is disabled.

Slide: provides no protections, but allows quick access to your home screen.

Voice Unlock: set a voice password and use it to unlock your phone.

Pattern: Lets you draw a simple pattern with your finger to unlock the phone.

PIN: set up a personal identification number to unlock the screen.

Password: enter a password to unlock the screen.