



VISION
led smart tv

N43LFSK

Vodič za ažuriranje TV softvera
TV Software Update Guide

 
Hrvatski vodič za ažuriranje

1. Korak Provjerite ime modela na stražnjoj strani TV-a.


Prije preuzimanja softvera za ažuriranje, molimo provjerite stražnju stranu TV-a za ime modela.

Ime modela mora biti N43LFSK.

1.A) Provjerite stražnji panel

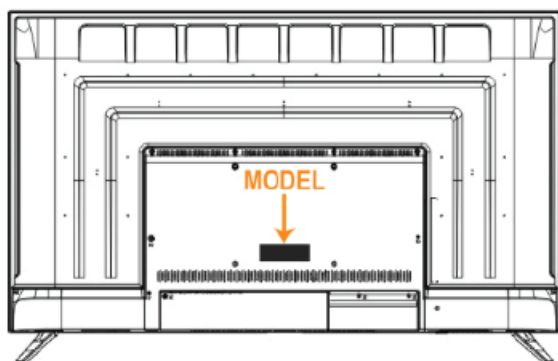

 1.B) Pronađite ime modela, označeno s narančastom bojom u ilustraciji:

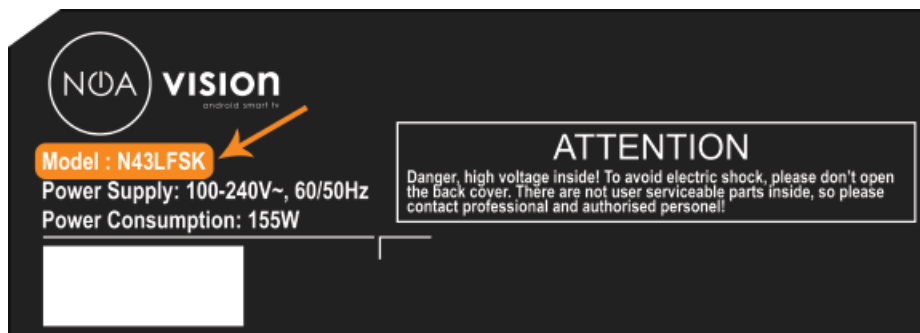

Ako ime modela nije N43LFSK, molimo Vas da ne preuzimate i ne koristite ovaj softver kako bi nadogradili vaš NOA Vision TV.

 
Nismo odgovorni za bilo kakvu štetu uzrokovanu nadogradnjom vašeg televizora s krivom verzijom softvera.

2. Korak Preuzmite najnoviji softver sa službene NOA Vision stranice

Službena stranica: <https://www.noa-mobile.hr/vision/n43lfsk>

3. Korak Raspakirajte arhivu koja sadrži firmware s bilo kojim alatom za arhiviranje: Winzip, Winrar, 7Zip itd.

Ekstrahirajte vašu preuzetu arhivu u direktorij po vašem izboru.

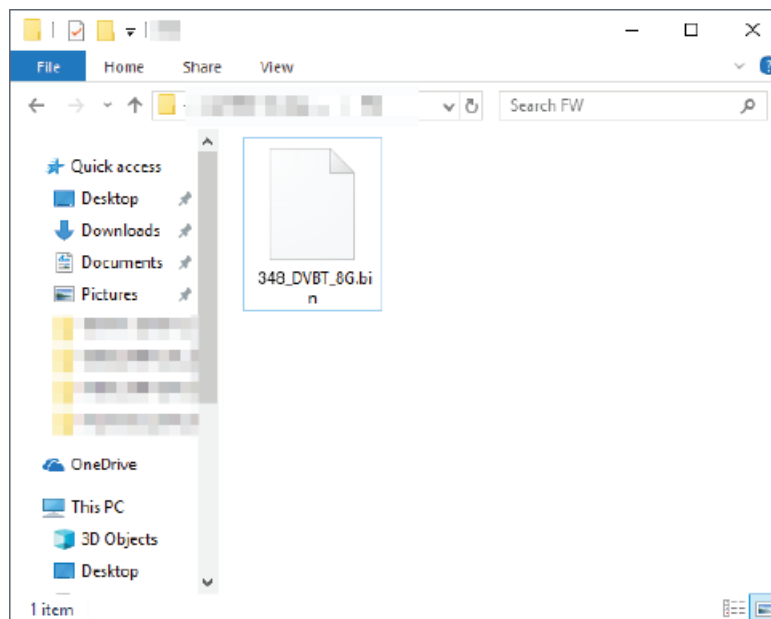


Važno: Naziv i ekstenzija raspakirane datoteke je: 348_DVBT_8G.bin.

Ako se naziv datoteke ne podudara, ne poduzimajte daljnje korake i vratite se na 1. Korak.

4. Korak Pripremite vašu USB memoriju (minimalna veličina USB memorije mora biti 2GB)

 
- Umetnite USB memoriju u USB priključak na vašem računalu ili laptopu.
- Odaberite vašu USB memoriju (ilustracija korak A) u direktoriju „ovaj PC/moje računalo“ i desno kliknite na njega.
- Odaberite „formatiraj“ iz izbornika desnog klika
- Odaberite FAT32 format datoteka (ilustracija korak B)
- Kliknite na „formatiraj“ (ilustracija korak C)
- Pričekajte da formatiranje završi (može trajati neko vrijeme ovisno o veličini USB memorije)

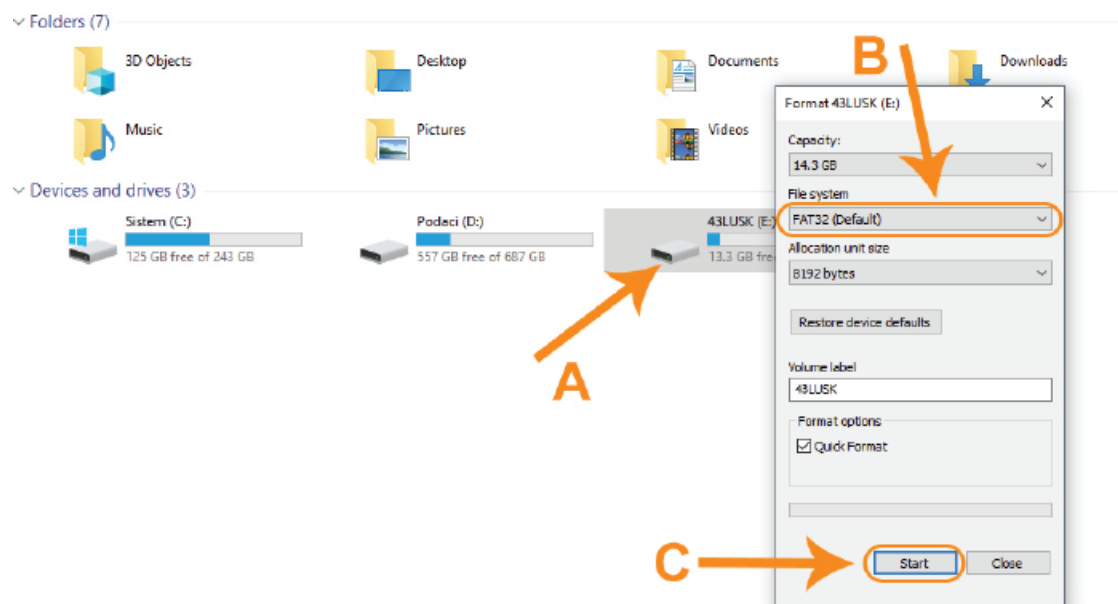

5. Korak Kopirajte vašu odpakiranu 348_DVBT_8G.bin datoteku u korijenski direktorij FAT32 formatirane USB memorije.


6. Korak Umetnite kabel TV-a u utičnicu i isključite TV na mehaničkom prekidaču (**postavite prekidač na 0**)

 - Prekidač se nalazi na stražnjoj desnoj strani TV-a

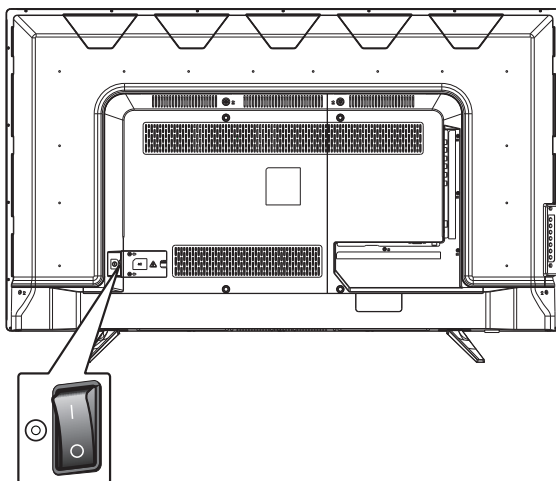


7. Korak Umetnite USB memoriju u USB priključak na TV-u

 - USB priključci se nalaze na lijevoj strani TV-a
- Možete koristiti bilo koja dva USB priključka (USB1 ili USB2)

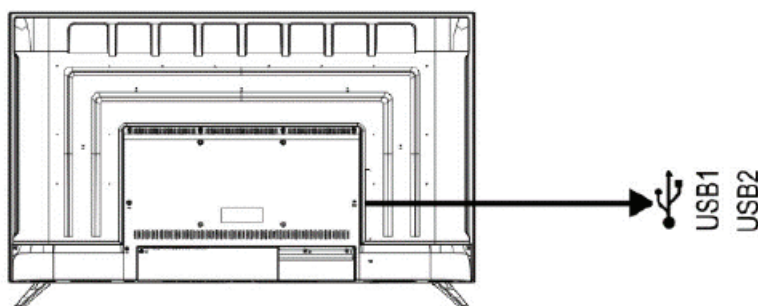


8. Korak Uključite TV na mehaničkom prekidaču (**postavite prekidač na 1**)

 - Prekidač se nalazi na stražnjoj desnoj strani TV-a

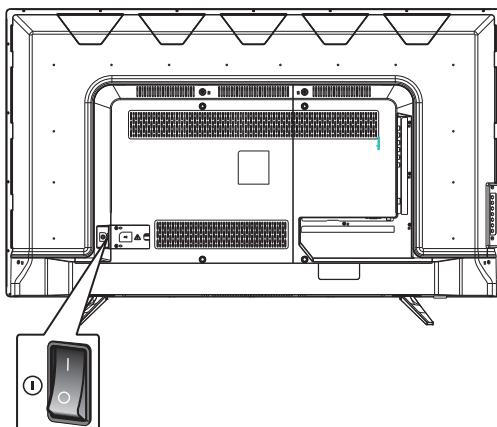

9. Korak Pojaviti će se plavi ekran ažuriranja softvera

- Molimo pričekajte dok se ažuriranje ne dovrši.
- Ne vadite USB memoriju iz priključka i ne prekidajte proces nadogradnje na bilo koji način.
- Bit će potrebno nekoliko minuta dok se proces ažuriranja ne dovrši.
- Nakon uspješnog ažuriranja, TV će se sam isključiti.

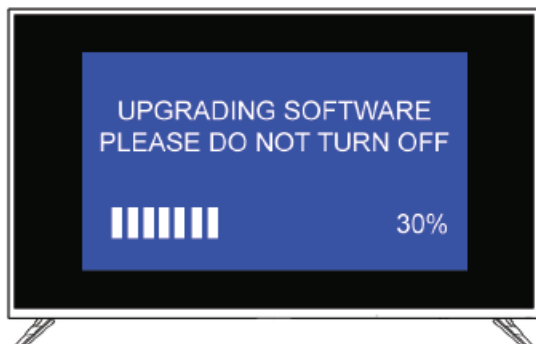


10. Korak Nakon uspješnog ažuriranja TV će se automatski isključiti.

- Prije nego li uključite TV, molimo Vas da uklonite USB memoriju iz USB priključka TV-a.
- Uključite TV pritiskom POWER tipke na daljinskom upravljaču.



 Vaš TV bi trebao biti ažuriran s najnovijim softverom

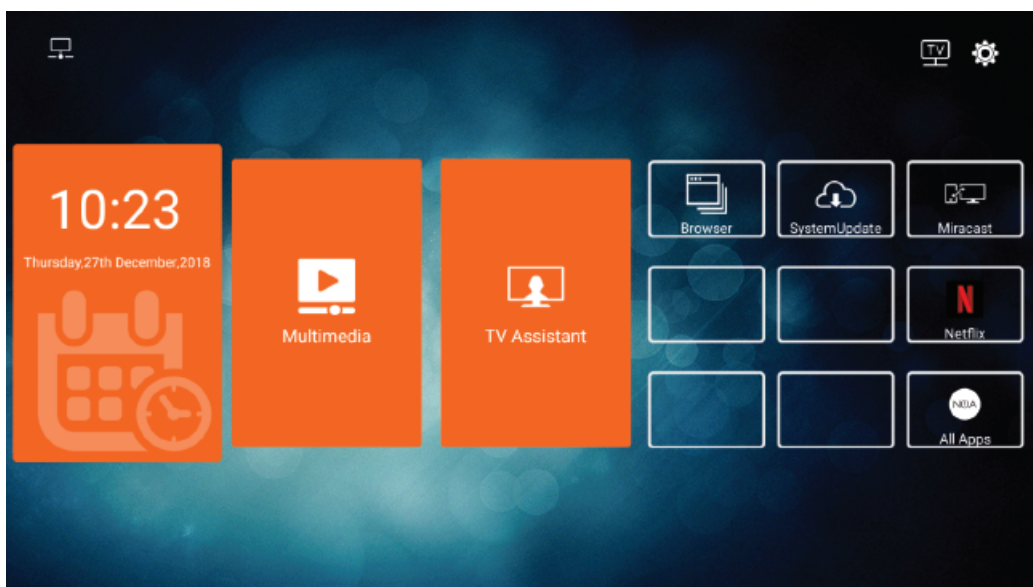


English Update Guide

Step 1. *Check the model name on the back side of the TV.*

Before downloading the software upgrade please check the back side of the TV for the model Name.

Model name must be N43LFSK.

 1.A) *Check the back panel*

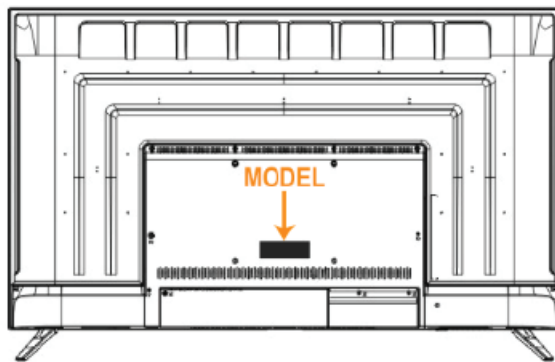

1.B) *Find the model name selected with orange label in the illustration:*



If the model name is not N43LFSK,
please do not download and use this software to upgrade your NOA Vision TV.

 
We do not take any responsibility and we are not liable for any damage caused by upgrading TV device with the wrong software version.

Step 2. *Download the latest software from the official NOA Vision Product Webpage*

Product page: <https://www.noa-mobile.hr/vision/n43lfsk>

Step 3. *Unzip/Extract archive containing firmware with any archive tool (Winzip, WinRar, 7Zip, etc.)*


Extract your downloaded archive in a folder of your choice.

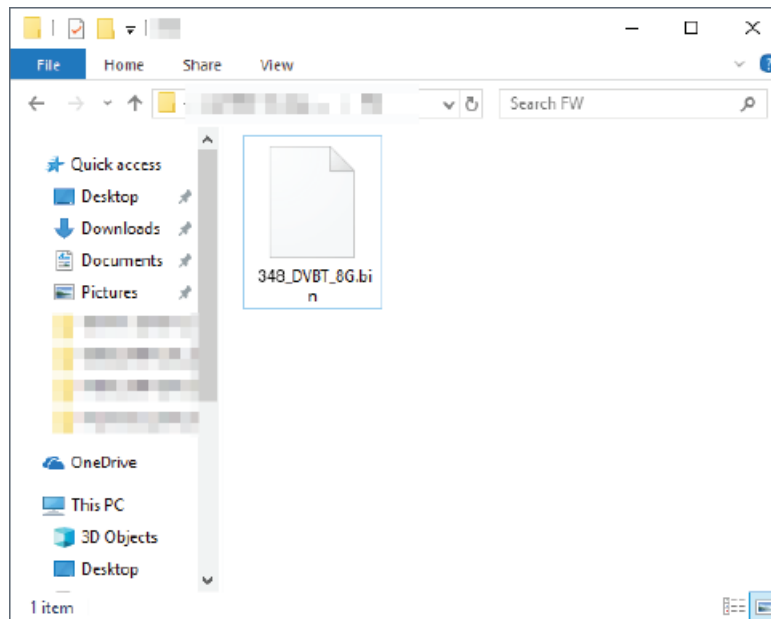

Important! Extracted file name and extension is: 348_DVBT_8G.bin
If the file name doesn't match do not proceed, please check Step 1.

Step 4. *Prepare your USB Drive (minimum USB drive size must be 2GB)*

 
- Insert your USB Flash drive into USB port on the PC or laptop device
- Select your USB Drive (illustration step A) in "My Computer / This PC" and right click on it,
- Select Format from the right click menu
- Select FAT32 file format (illustration step B)
- Click on Format (illustration step C)
- Wait for format to finish (It will take some time depending on the Flash Drive size)

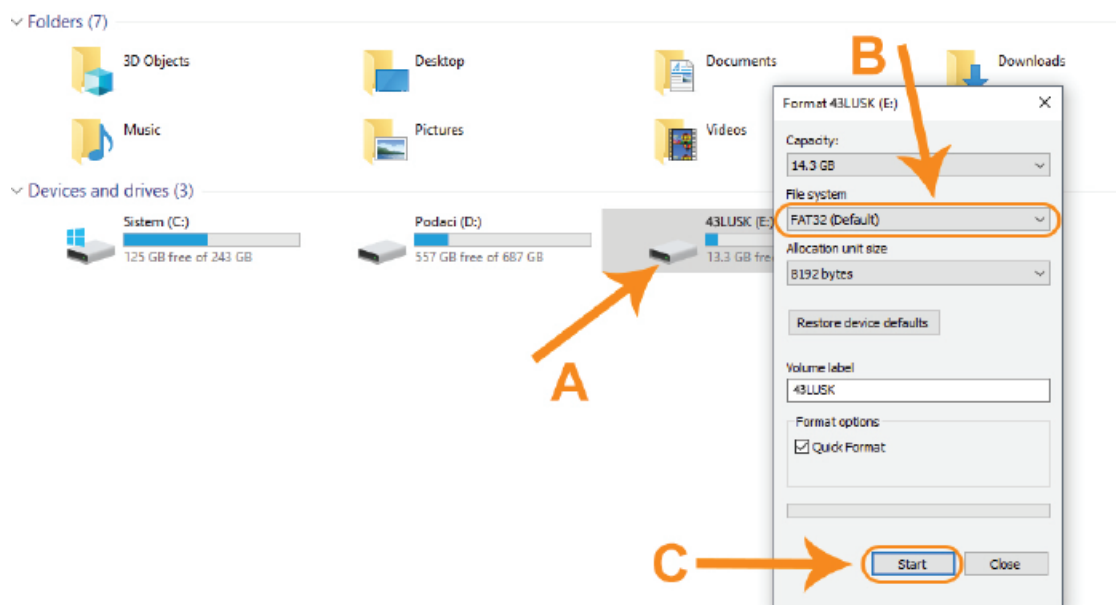

Step 5. Copy your extracted 348_DVBT_8G.bin to root of FAT32 formatted USB flash drive


Step 6. Plug the TV into power outlet,
and turn off the TV on physical power switch (set switch to 0)

 - Switch can be located on the Back Right of the TV

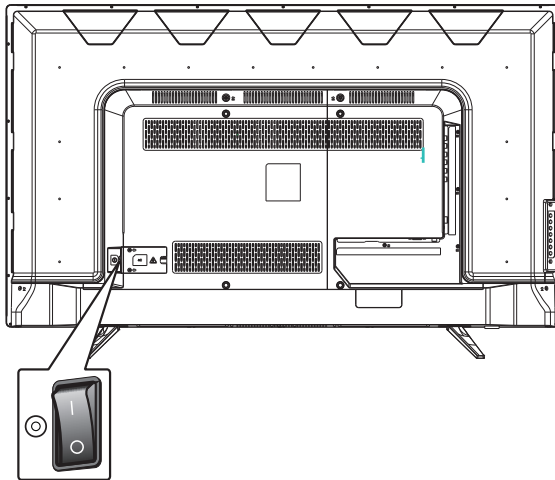


Step 7. Insert USB drive into USB port of the TV

 - USB ports are located on the Left side of the TV
- You can use any of the two USB ports (USB1 or USB2)

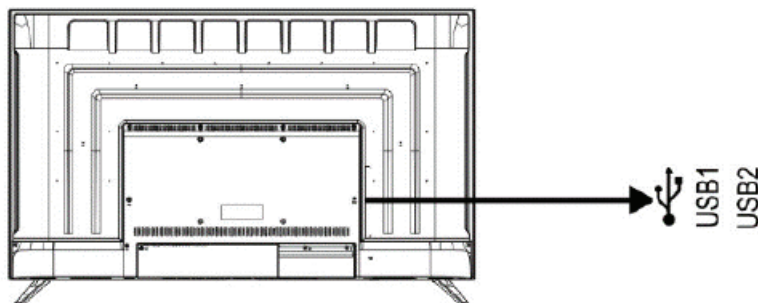


Step 8. Turn on the TV on physical power switch (set switch to 1)

 - Switch can be located on the Back Right of the TV

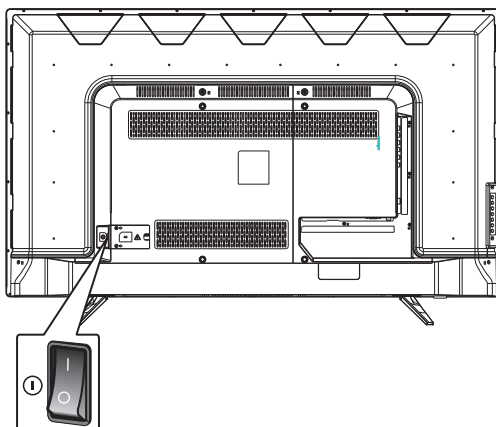

Step 9. *Blue software update screen should appear*

- Please wait for update to finish
- Do not unplug the USB at this point or interrupt the upgrade process
- It will take several minutes for update to finish.
- After successful update TV will turn OFF by itself

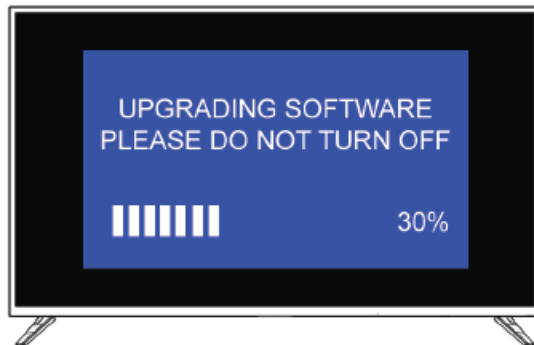

Step 10. *After successful update TV device will be turned off automatically*

- Before turning the TV on, please remove the USB Flash Drive from the USB Port of the TV
- Turn on the TV by pressing the POWER button on the Remote Controller



Your TV should be updated to the latest version

