



**VISION**  
led smart tv

***N50LUSK***

***Vodič za ažuriranje TV softvera***  
***TV Software Update Guide***


# Hrvatski vodič za ažuriranje

## 1. Korak Provjerite ime modela na stražnjoj strani TV-a.

Prije preuzimanja softvera za ažuriranje, molimo provjerite stražnju stranu TV-a za ime modela.

Ime modela mora biti N50LUSK.

### 1.A) Provjerite stražnji panel

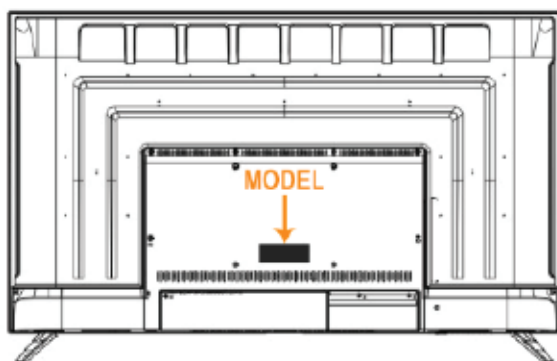

### 1.B) Pronađite ime modela, označeno s narančastom bojom u ilustraciji:



Ako ime modela nije N50LUSK, molimo Vas da ne preuzimate i ne koristite ovaj softver kako bi nadogradili vaš NOA Vision TV.


**Nismo odgovorni za bilo kakvu štetu uzrokovanu nadogradnjom vašeg televizora s krivom verzijom softvera.**

## 2. Korak Preuzmite najnoviji softver sa službene NOA Vision stranice

Službena stranica: <https://www.noa-mobile.hr/vision/n50lusk>

**3. Korak** Raspakirajte arhivu koja sadrži firmware s bilo kojim alatom za arhiviranje: Winzip, Winrar, 7Zip itd.

Ekstrahirajte vašu preuzetu arhivu u direktorij po vašem izboru.

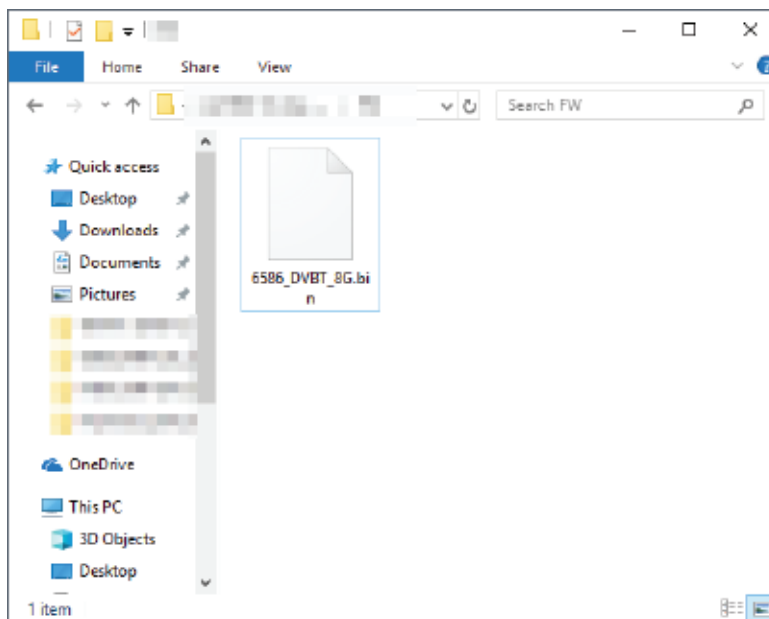


**Važno:** Naziv i ekstenzija raspakirane datoteke je: 6586\_DVBT\_8G.bin.

Ako se naziv datoteke ne podudara, ne poduzimajte daljnje korake i vratite se na 1. Korak.

**4. Korak** Pripremite vašu USB memoriju (minimalna veličina USB memorije mora biti 2GB)


- Umetnite USB memoriju u USB priključak na vašem računalu ili laptopu.
- Odaberite vašu USB memoriju (ilustracija korak A) u direktoriju „ovaj PC/moje računalo“ i desno kliknite na njega.
- Odaberite „formatiraj“ iz izbornika desnog klika
- Odaberite FAT32 format datoteka (ilustracija korak B)
- Kliknite na „formatiraj“ (ilustracija korak C)
- Pričekajte da formatiranje završi (može trajati neko vrijeme ovisno o veličini USB memorije)

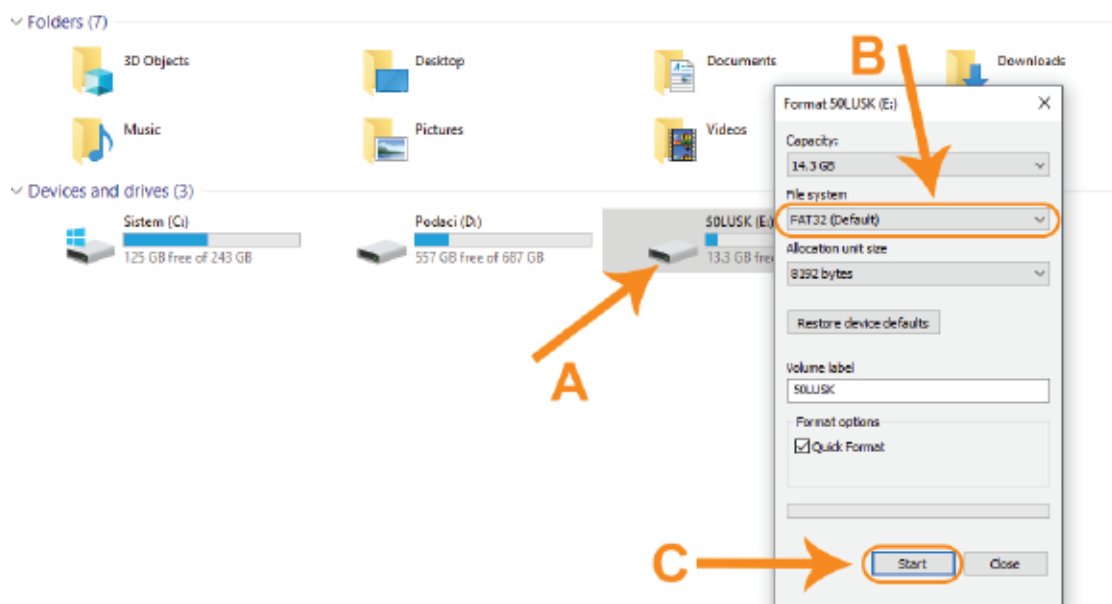

**5. Korak** Kopirajte vašu otpakiranu 6586\_DVBT\_8G.bin datoteku u korijenski direktorij FAT32 formatirane USB memorije.


**6. Korak** Umetnite kabel TV-a u utičnicu i isključite TV na mehaničkom prekidaču (**postavite prekidač na 0**)

- Prekidač se nalazi na donjoj desnoj strani TV-a

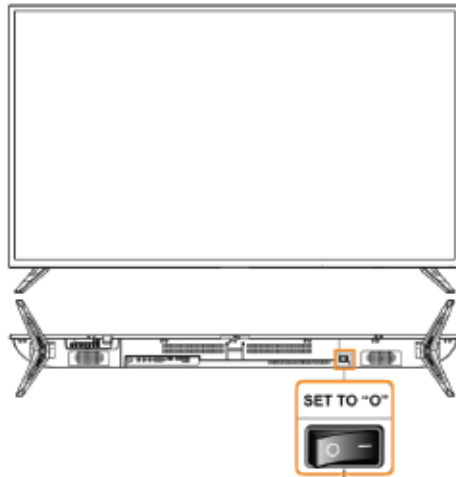


**7. Korak** Umetnite USB memoriju u USB priključak na TV-u

- USB priključci se nalaze na lijevoj strani TV-a
- Možete koristiti bilo koja dva USB priključka (USB1 ili USB2)

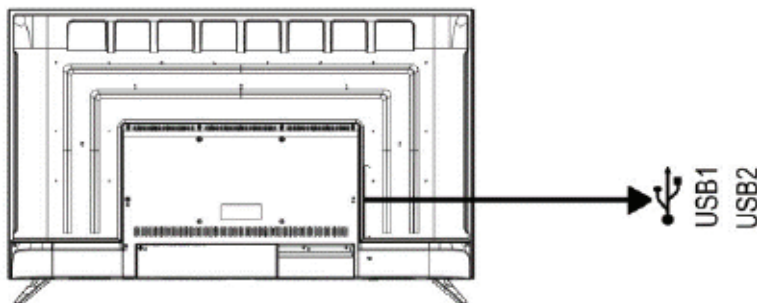


**8. Korak** Uključite TV na mehaničkom prekidaču (**postavite prekidač na 1**)

- Prekidač se nalazi na donjoj desnoj strani TV-a

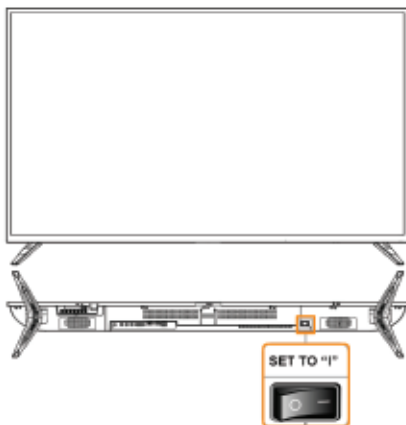

## 9. Korak Pojaviti će se plavi ekran ažuriranja softvera

- Molimo pričekajte dok se ažuriranje ne dovrši.
- Ne vadite USB memoriju iz priključka i ne prekidajte proces nadogradnje na bilo koji način.
- Bit će potrebno nekoliko minuta dok se proces ažuriranja ne dovrši.
- Nakon uspješnog ažuriranja, TV će se sam isključiti.

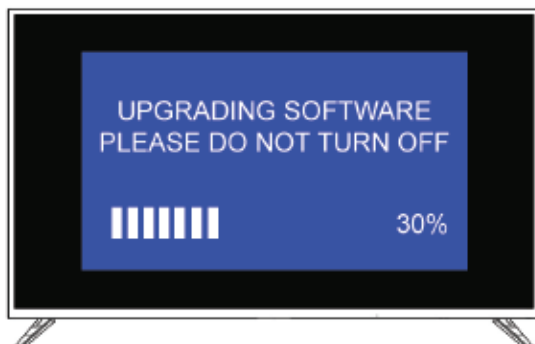


## 10. Korak Nakon uspješnog ažuriranja TV će se automatski isključiti.

- Prije nego li uključite TV, molimo Vas da uklonite USB memoriju iz USB priključka TV-a.
- Uključite TV pritiskom POWER tipke na daljinskom upravljaču.



Vaš TV bi trebao biti ažuriran s najnovijim softverom

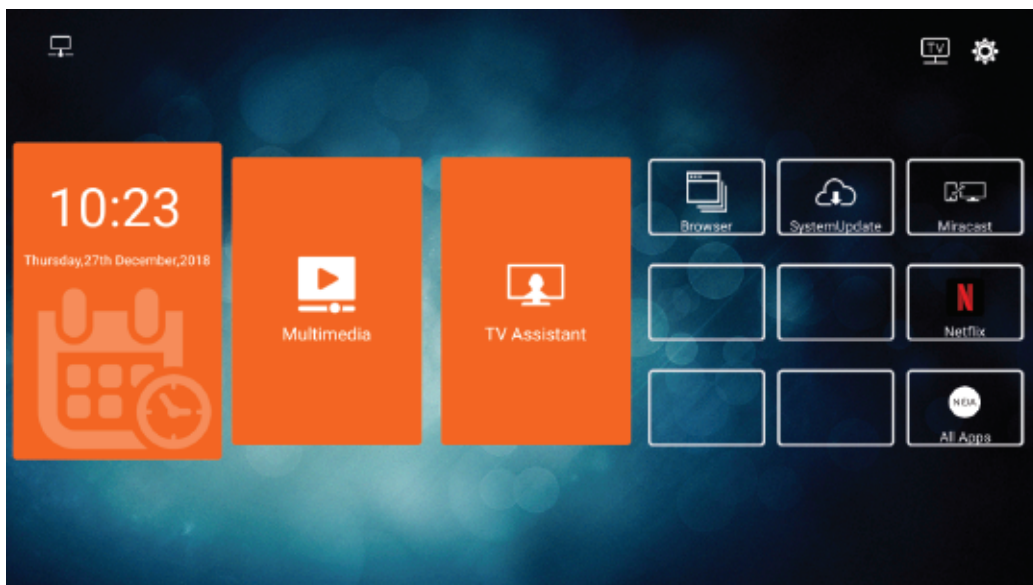


# English Update Guide

## **Step 1.** *Check the model name on the back side of the TV.*

Before downloading the software upgrade please check the back side of the TV for the model Name.

Model name must be N50LUSK.

### **1.A)** *Check the back panel*

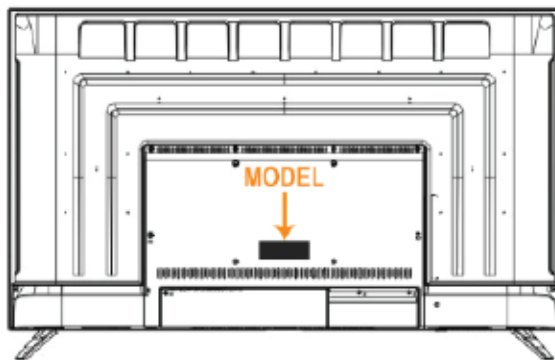

### **1.B)** *Find the model name selected with orange label in the illustration:*



If the model name is not N50LUSK,  
please do not download and use this software to upgrade your NOA Vision TV.


***We do not take any responsibility and we are not liable for any damage caused by upgrading TV device with the wrong software version.***

## **Step 2.** *Download the latest software from the official NOA Vision Product Webpage*

Product page: <https://www.noa-mobile.hr/vision/n50lusk>

### Step 3. Unzip/Extract archive containing firmware with any archive tool


Extract your downloaded archive in a folder of your choice (Winzip, WinRar, 7Zip, etc.)

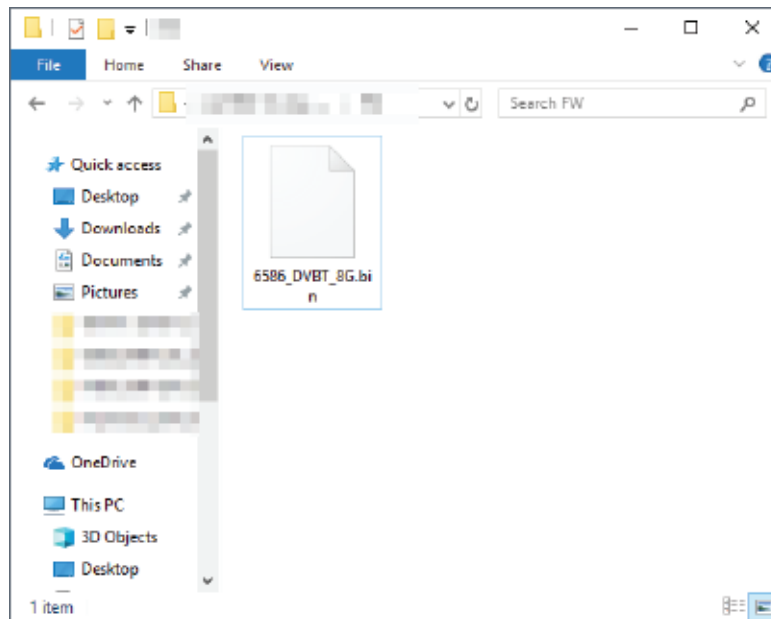

**Important! Extracted file name and extension is: 6586\_DVBT\_8G.bin**  
If the file name doesn't match do not proceed, please check Step 1.

### Step 4. Prepare your USB Drive (minimum USB drive size must be 2GB)


- Insert your USB Flash drive into USB port on the PC or laptop device
- Select your USB Drive (illustration step A) in "My Computer / This PC" and right click on it,
- Select Format from the right click menu
- Select FAT32 file format (illustration step B)
- Click on Format (illustration step C)
- Wait for format to finish (It will take some time depending on the Flash Drive size)

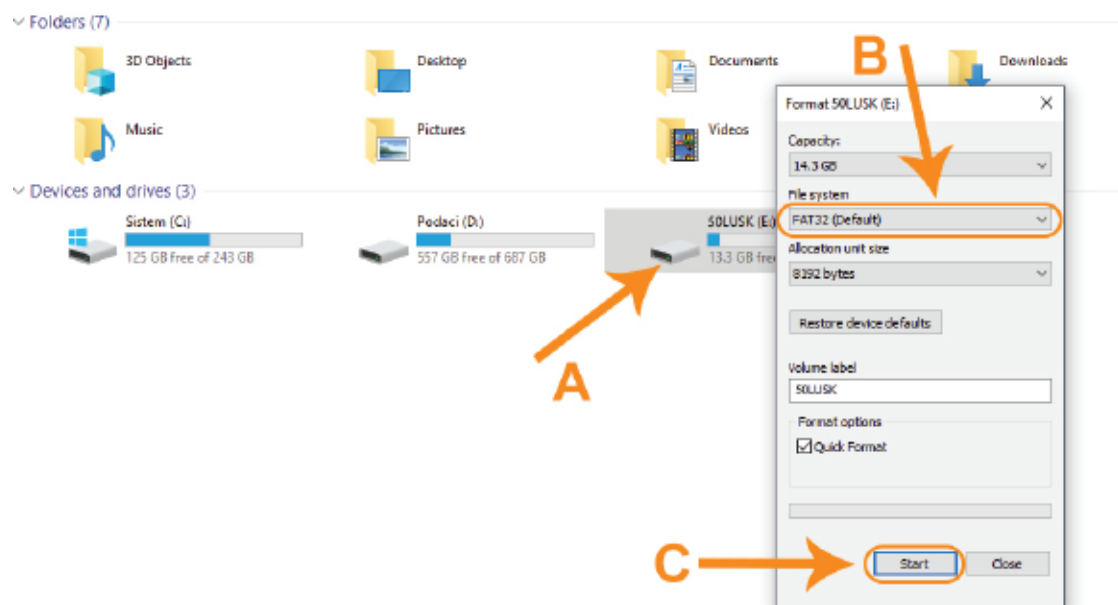

**Step 5.** Copy your extracted 6586\_DVBT\_8G.bin to root of FAT32 formatted USB flash drive


**Step 6.** Plug the TV into power outlet,  
and turn off the TV on physical power switch (**set switch to 0**)

- Switch can be located on the Bottom Right of the TV

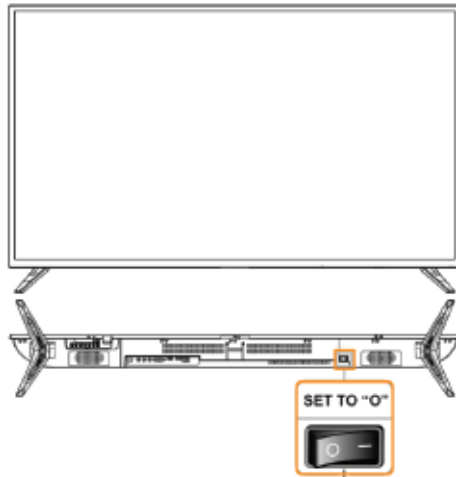


**Step 7.** Insert USB drive into USB port of the TV

- USB ports are located on the Left side of the TV
- You can use any of the two USB ports (USB1 or USB2)

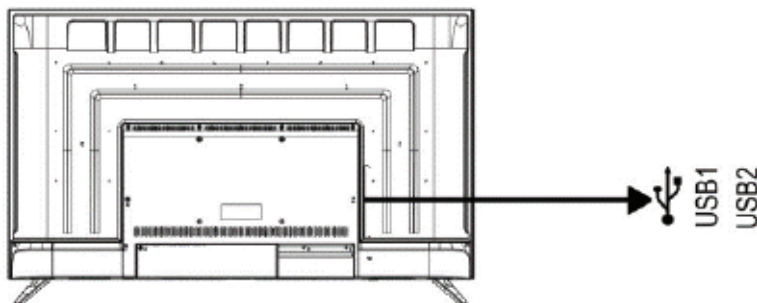

**Step 8.** Turn on the TV on physical power switch (**set switch to 1**)


- Switch can be located on the Bottom Right of the TV

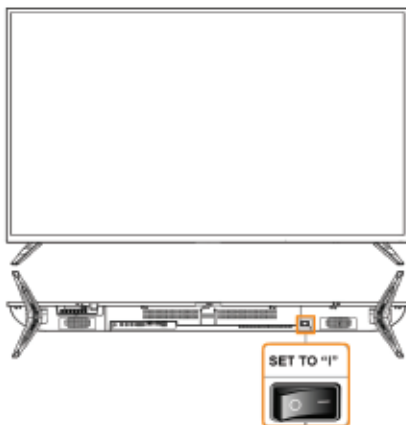



**Step 9.** *Blue software update screen should appear*

- Please wait for update to finish
- Do not unplug the USB at this point or interrupt the upgrade process
- It will take several minutes for update to finish.
- After successful update TV will turn OFF by itself

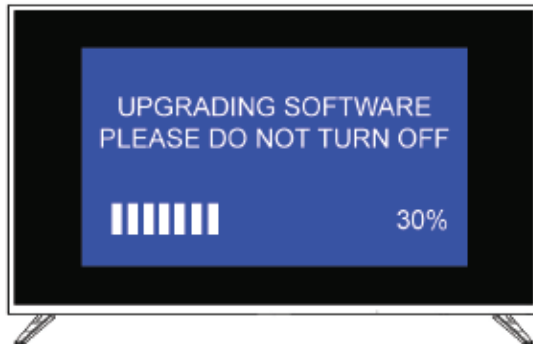

**Step 10.** *After successful update TV device will be turned off automatically*

- Before turning the TV on, please remove the USB Flash Drive from the USB Port of the TV
- Turn on the TV by pressing the POWER button on the Remote Controller



**Your TV should be updated to the latest version**

